





# Rapidspan Desk

## Leg and Modesty Assembly and Timber Top Attachment Instructions


1.

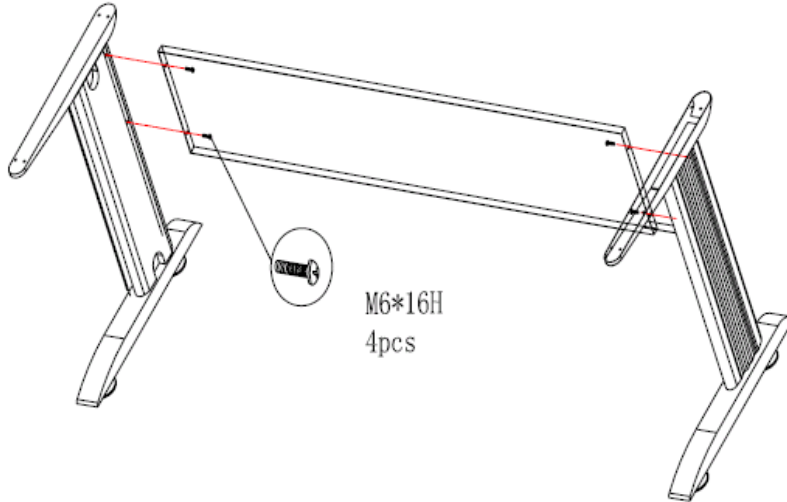

	M5*20H 3pcs		M6*16H 4pcs
	M5*30H 8pcs		

\*\*\*For Timber Top Fitment, First Centre Top And Ensure That The Correct Length Screw Is used\*\*\*

2.

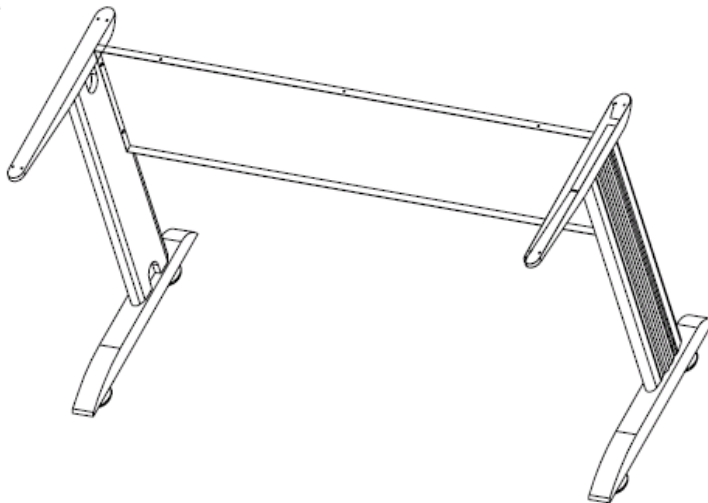

3.

