


ASSEMBLY INSTRUCTIONS





CR45

rapidline
FURNITURE FOR TODAY

2011-8-25

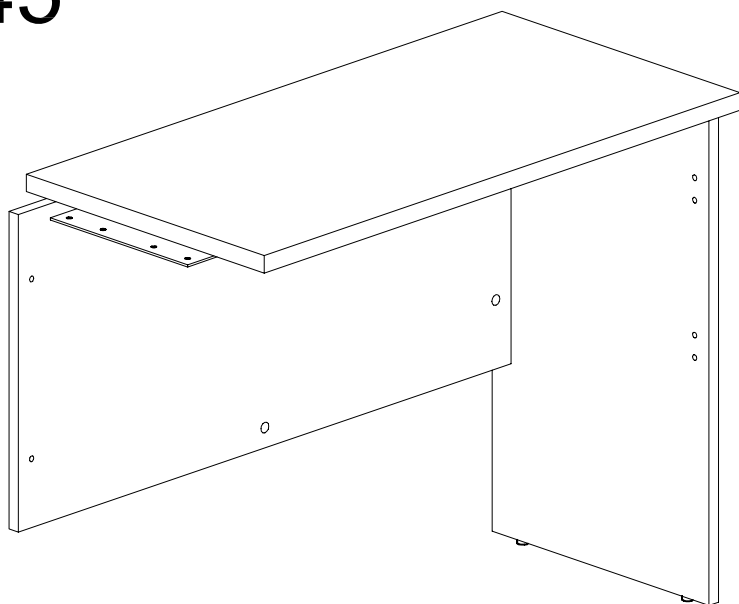

- pin 6x35 5PCS
- CAM 6PCS
- Cam Cover 6PCS
- CONNECTOR 280x100x2 1PCS
- Screw 6x12 6PCS
- Screw 6x25 2PCS

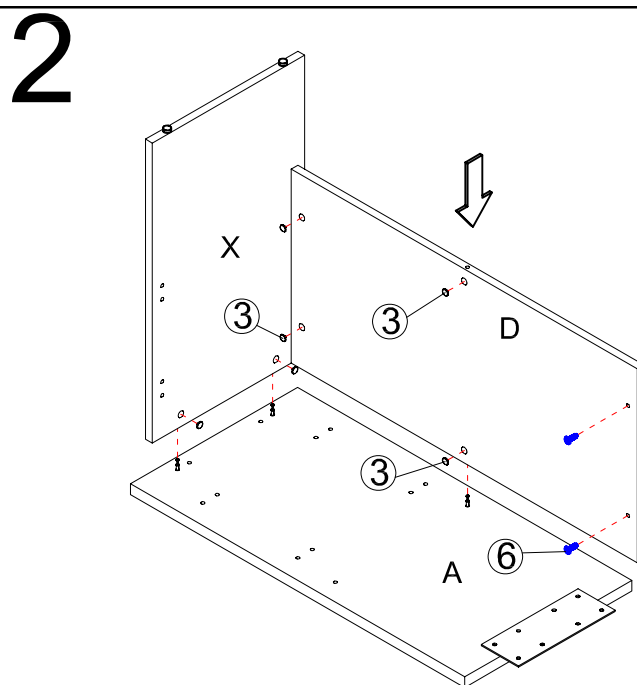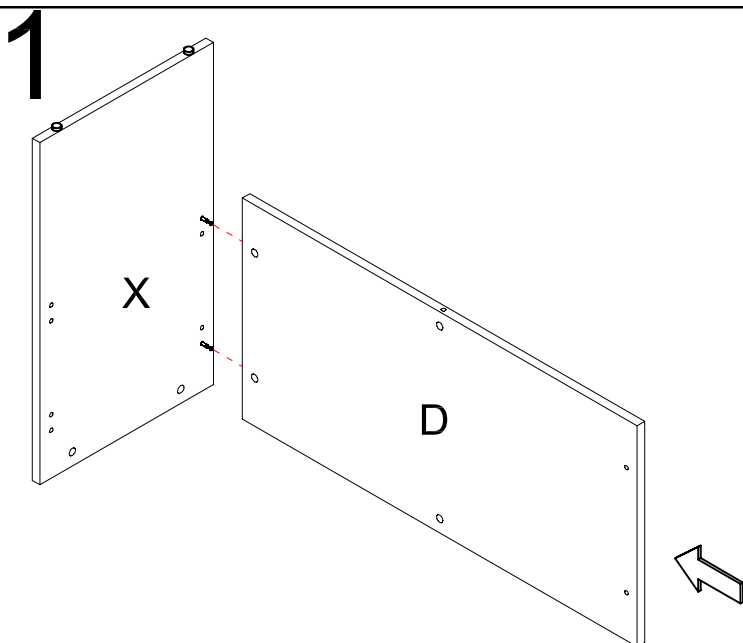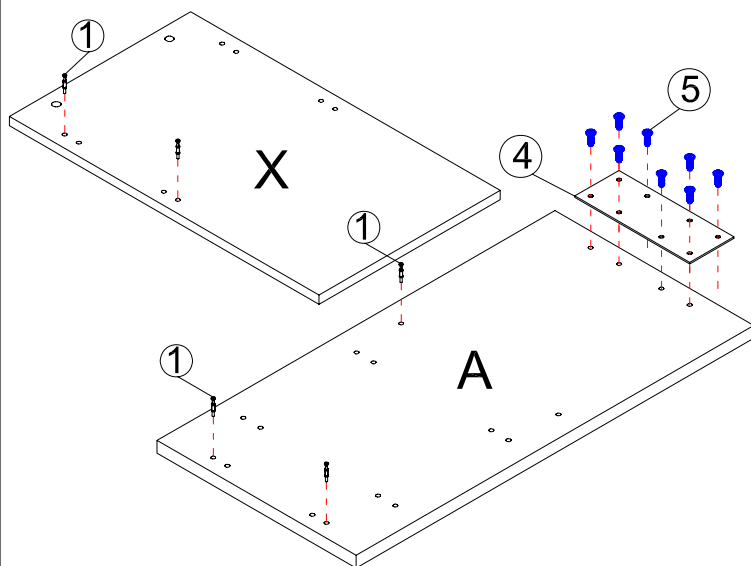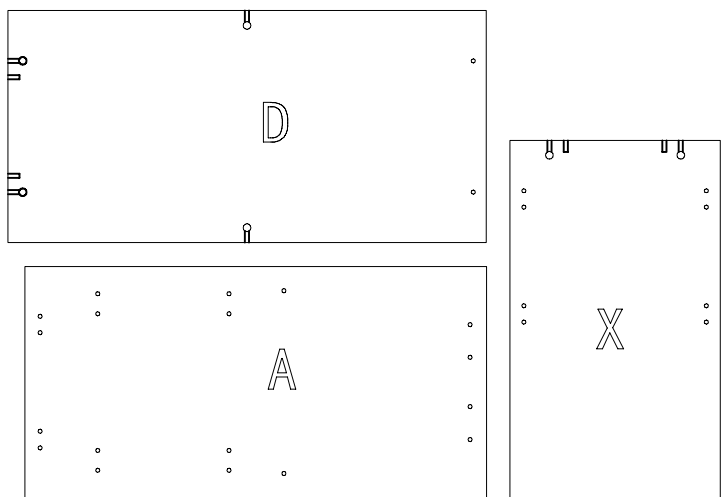

ASSEMBLY INSTRUCTIONS

CR6

CR12

rapidline
FURNITURE FOR TODAY

2011-8-25

