
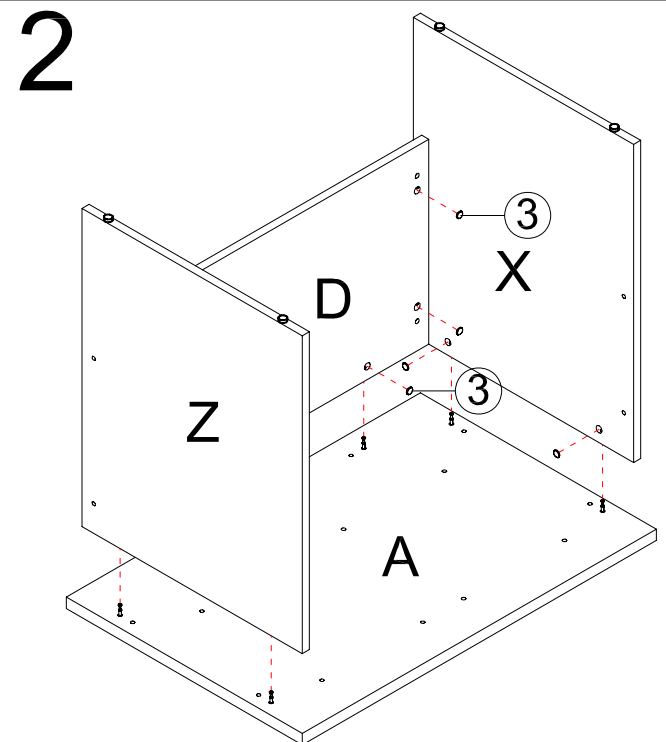
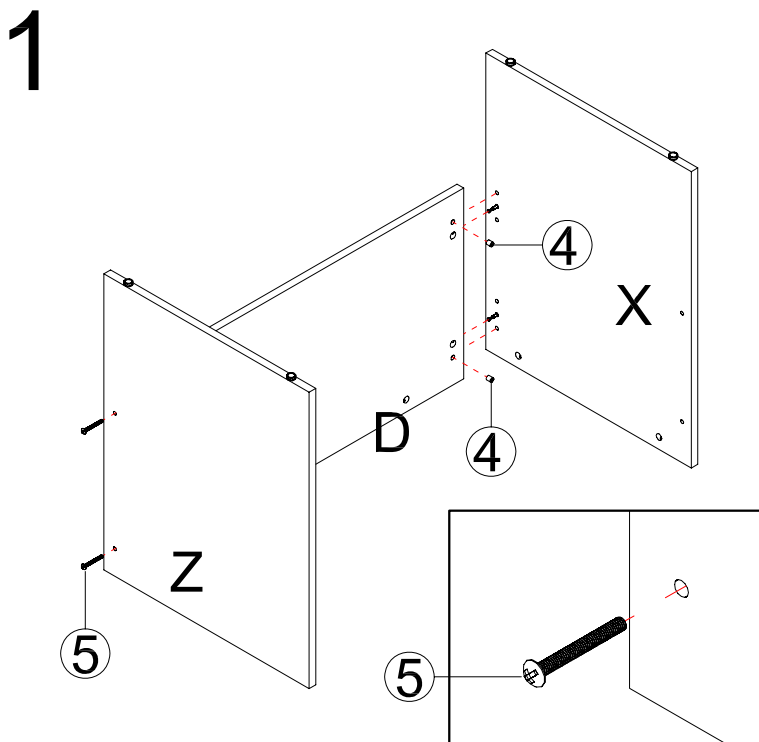
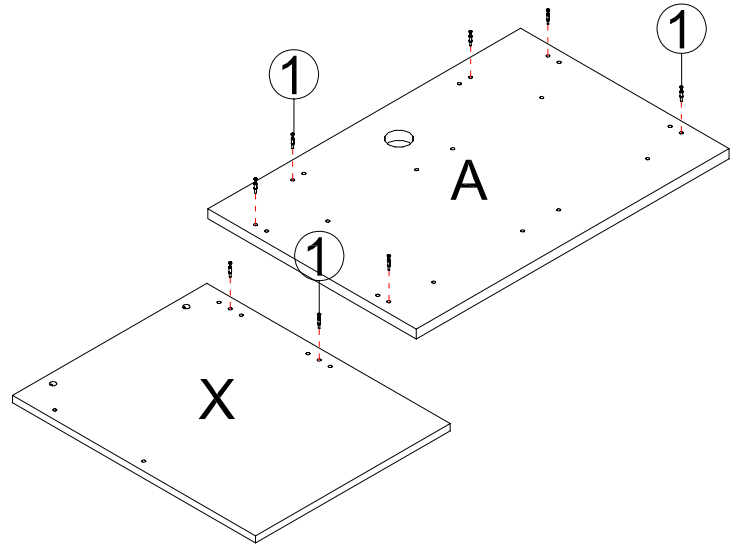
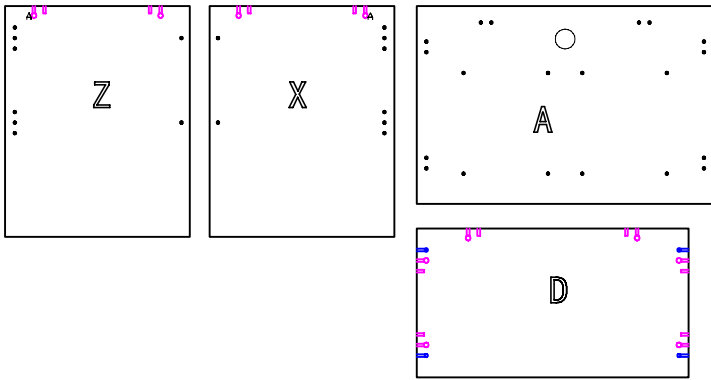
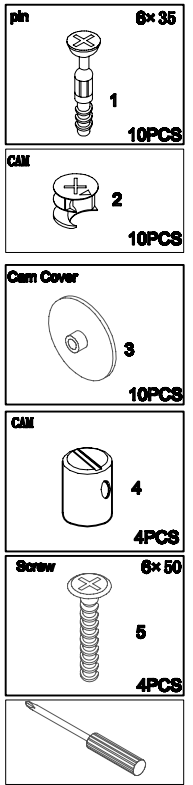


ASSEMBLY INSTRUCTIONS

CDK96

rapidline
FURNITURE FOR TODAY

2011-8-25

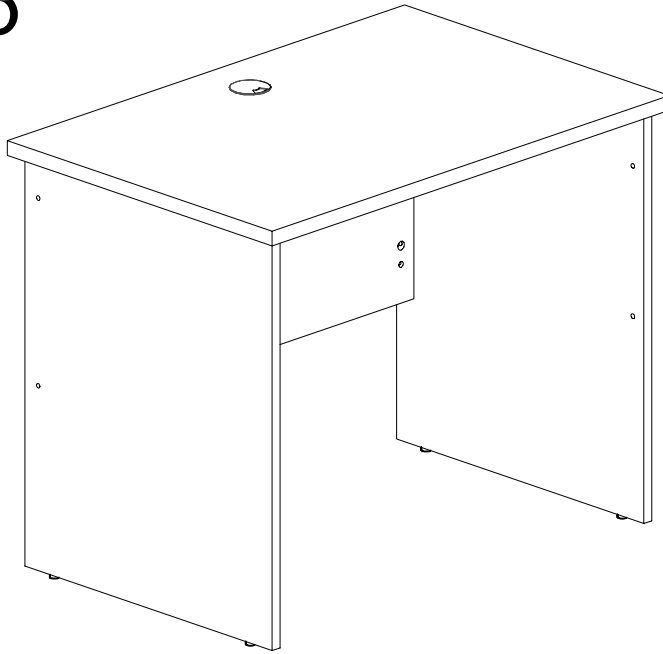


ASSEMBLY INSTRUCTIONS







CDK189





CDK1875

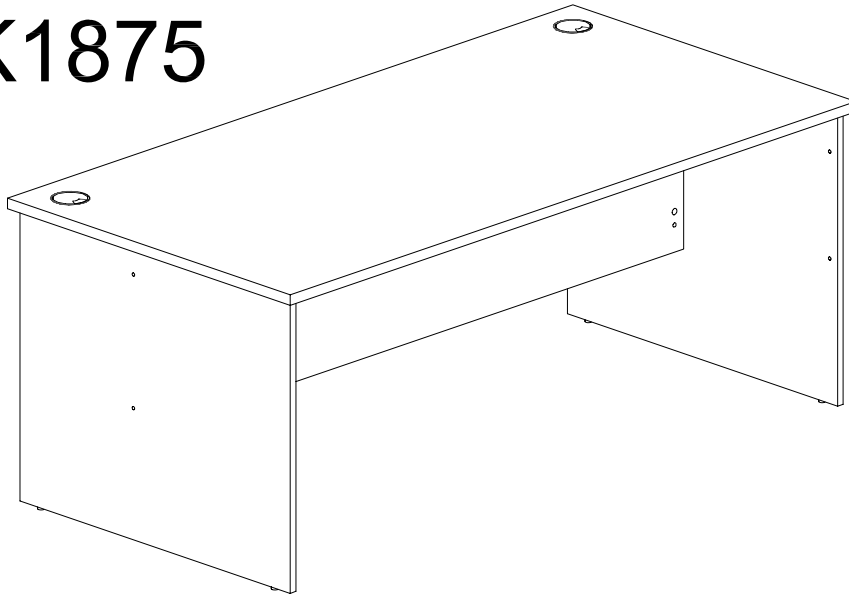rapidline
FURNITURE FOR TODAY

2011-8-25



pin	6x35		1	10PCS
CAM			2	10PCS
Cam Cover			3	10PCS
CAM			4	4PCS
Screw	6x50		5	4PCS
				

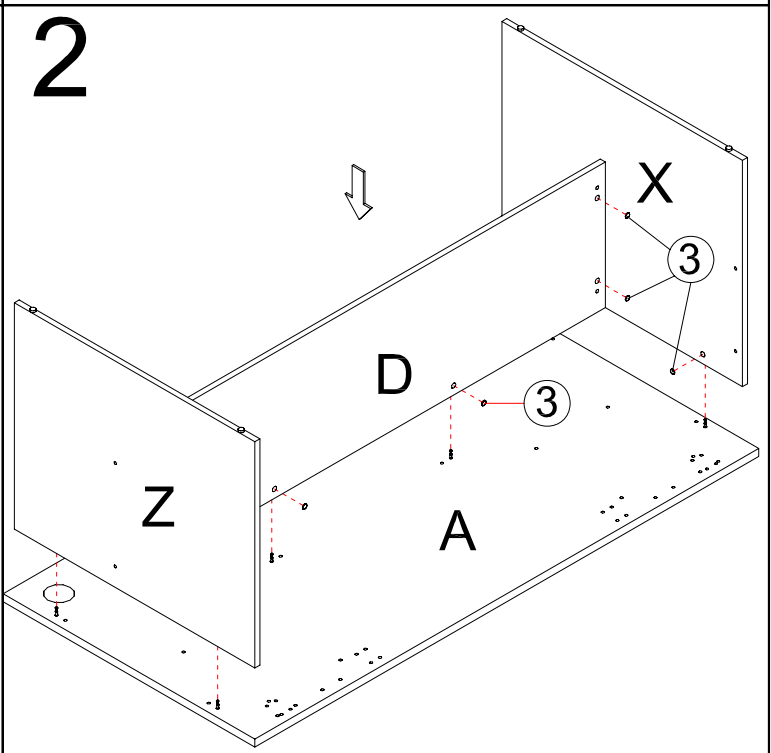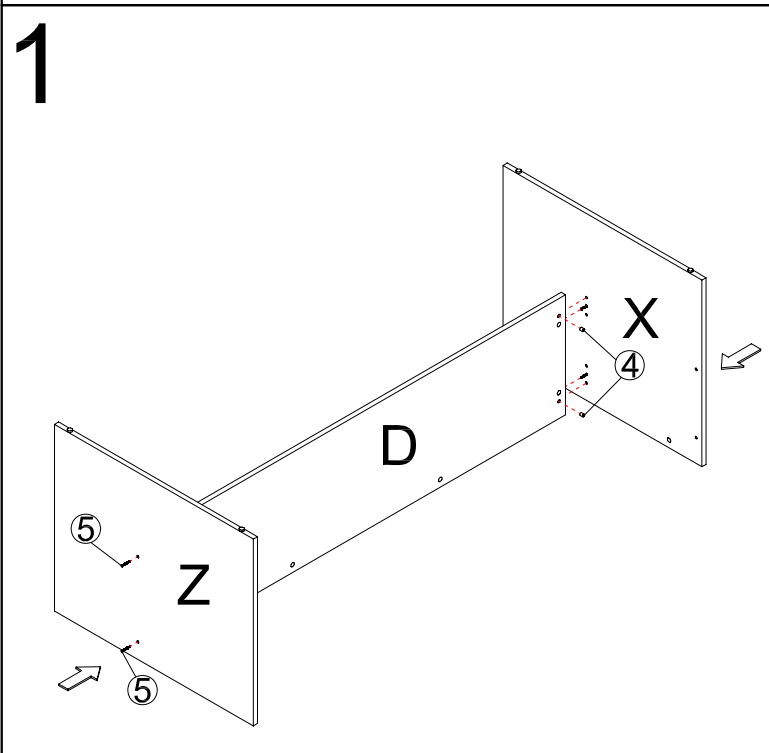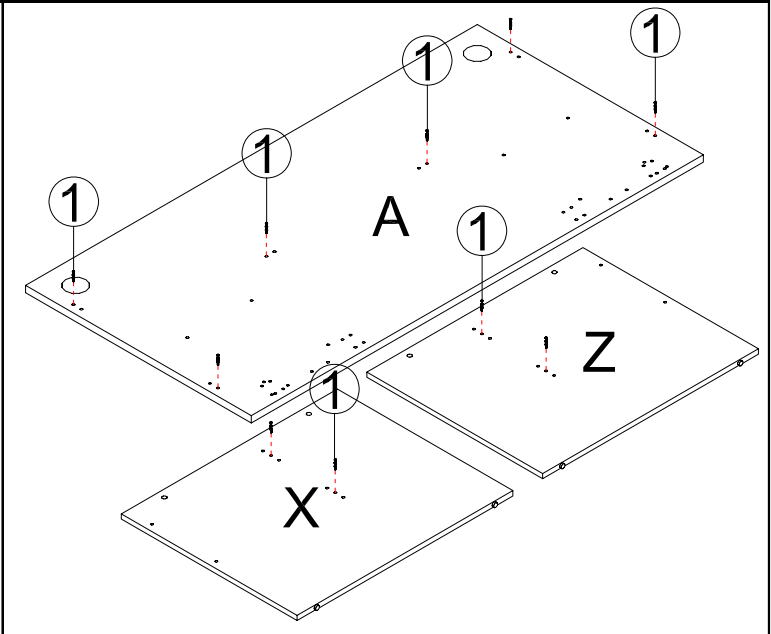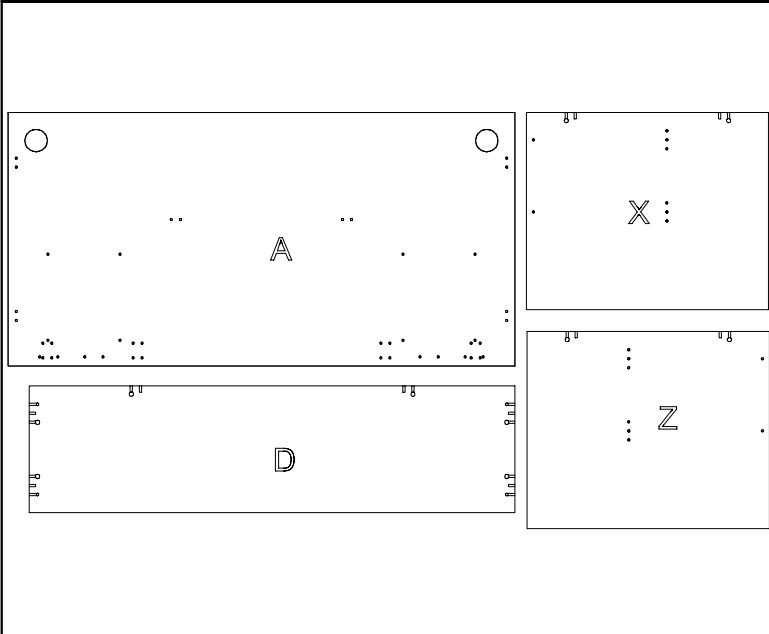


ASSEMBLY INSTRUCTIONS

CDK1575

CDK126

rapidline
FURNITURE FOR TODAY
2011-8-25

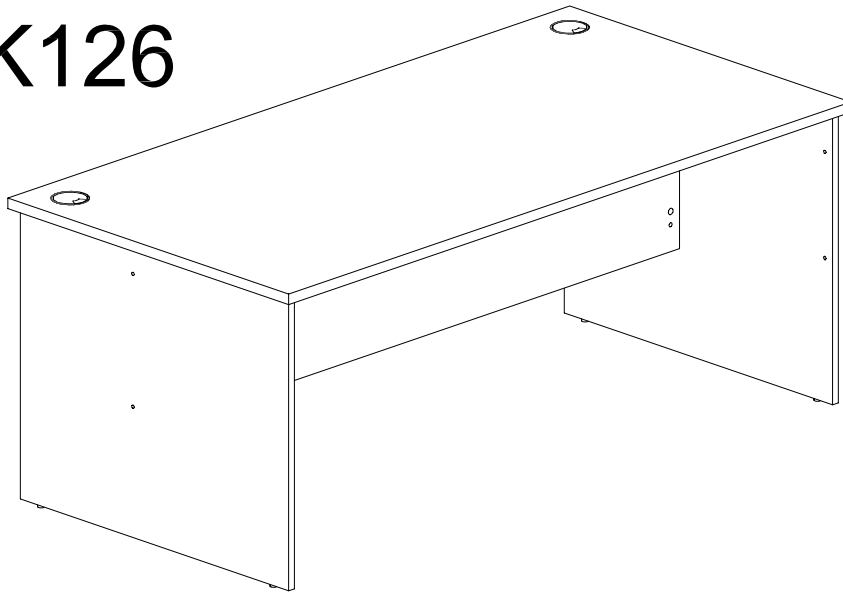

- pin 6x35
1
10PCS
 - CAM
2
10PCS
 - Cam Cover
3
10PCS
 - CAM
4
4PCS
 - Screw 6x A50
5
4PCS
-

